

1. Package and Product Parameters

Package Contents:


Watch Phone Z6	1	Charging Cable	1
Manual	1	SIM Card Picker	1

Product Parameters:


Product: Watch Phone
 Model: W1818A0
 Battery: Lithium Polymer Battery 3.85V 680mAh
 Cameras: Front Camera 5MP, Rear Camera 8MP
 Charge Input: DC 5V 1200mA
 Working Temperature: 0 C ~35 C
 Working Humidity: Noncondensable 15%~93%
 Network Frequency Bands: 2G GSM 900/1800MHz
 2G CDMA BC0 800MHz
 3G CDMA2000 BC0 800MHz
 3G WCDMA B1/B2/B5/B8
 4G FDD-LTE B1/B2/B3/B5/B8
 4G TDD-LTE B38/B39/B40/B41(100M)

2. Device Layout

Watch Face:

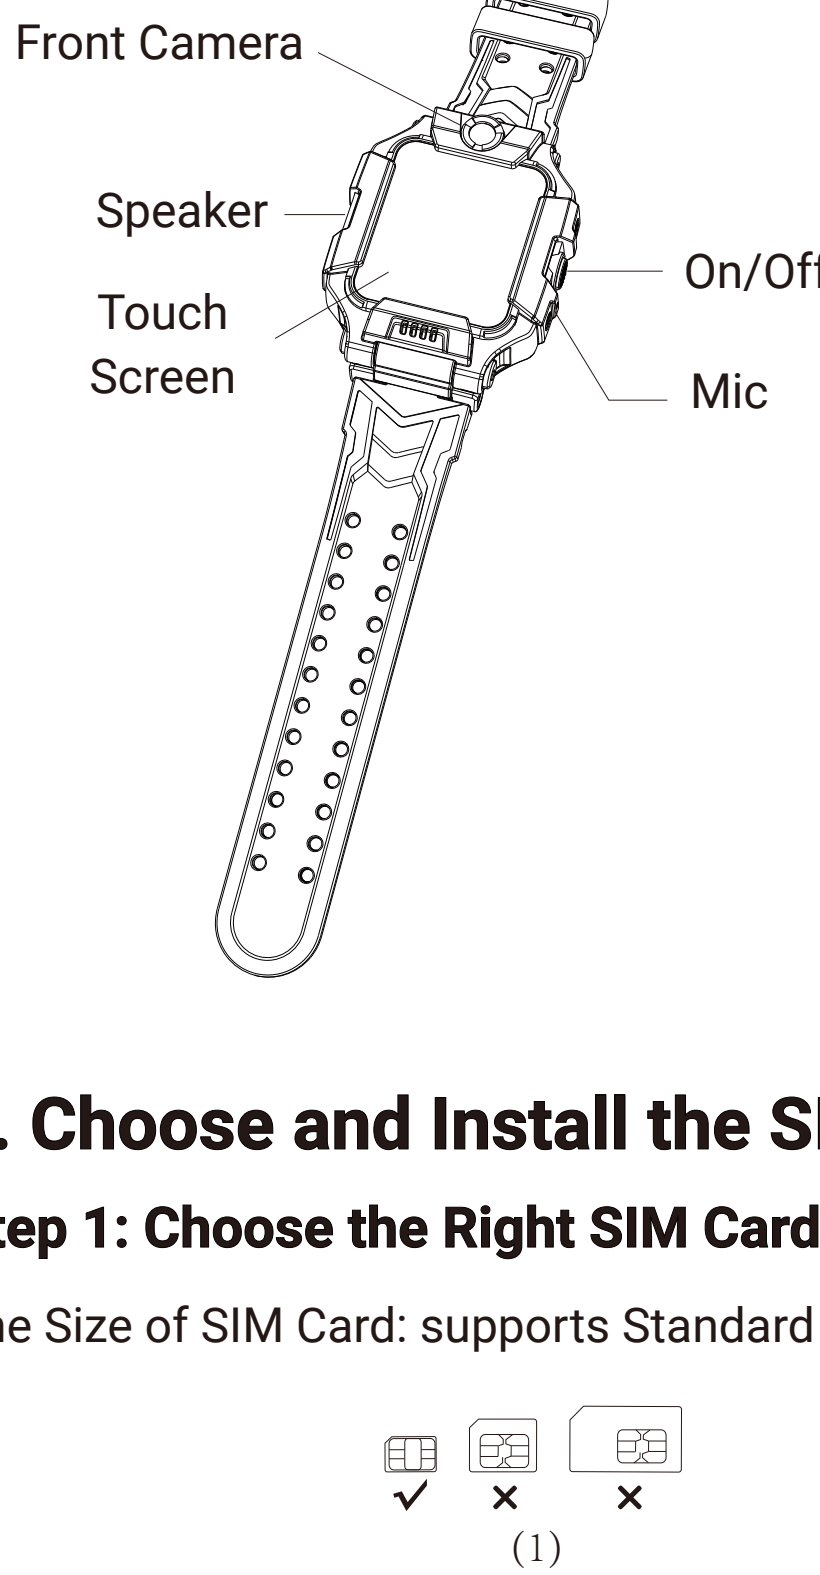

Watch Back:

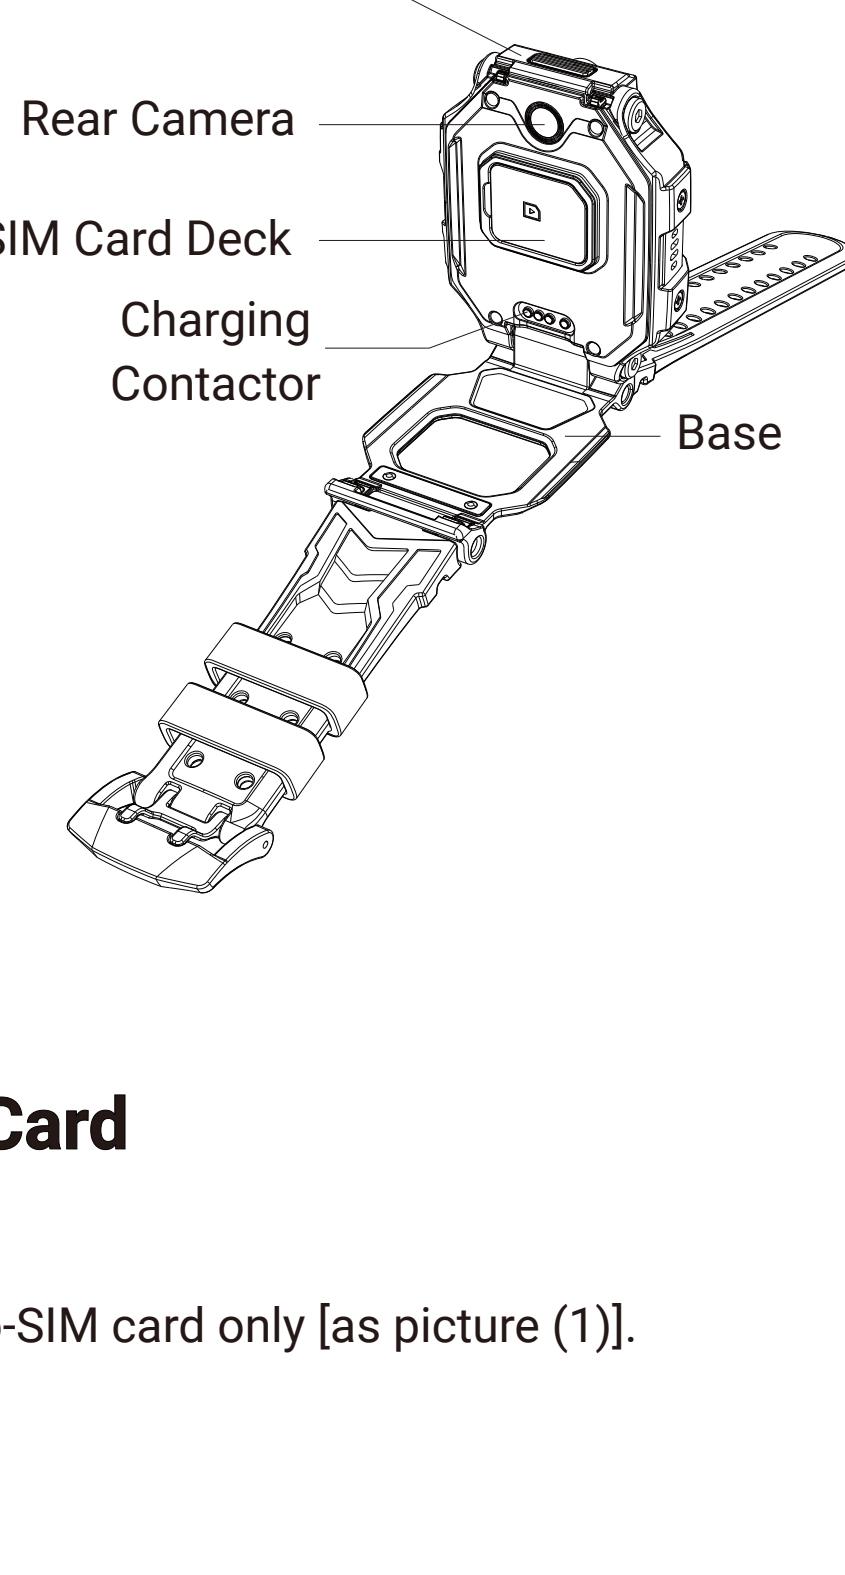

3. Choose and Install the SIM Card

Step 1: Choose the Right SIM Card


The Size of SIM Card: supports Standard Nano-SIM card only [as picture (1)].




Step 2: Activate "Caller ID" function & data plan

Please activate "Caller ID" function and enable GPRS data network. Watch phone can access to either 2G/3G/4G network data.


Step 3: Install the SIM Card

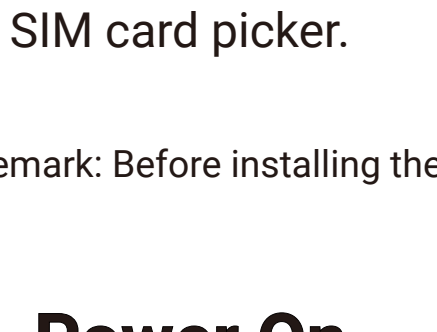

1. Open up the SIM card deck with a SIM card picker.

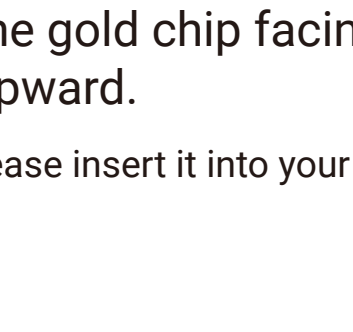


2. Put the Nano-SIM card on the card deck with the gold chip facing upward.

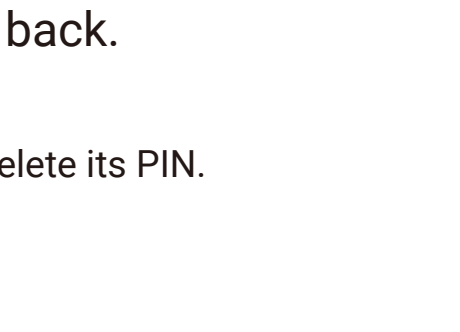

3. Insert the SIM card deck into the watch's back.

*Remark: Before installing the SIM card, please insert it into your mobile phone to delete its PIN.

4. Power On

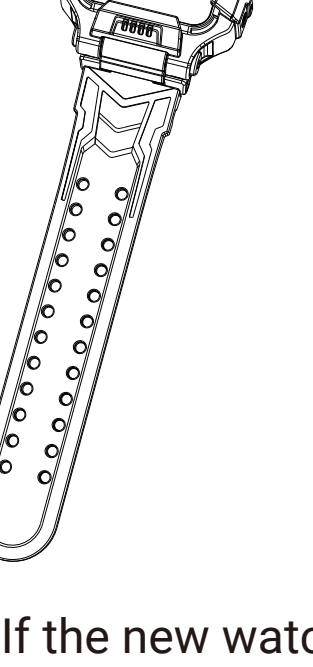

Power On: Press On/Off button for 2 seconds to power on the watch phone.

1. If the new watch cannot be turned on, it is probably out of power. Please plug in the charging cable until the watch is turned on automatically.
2. For general abnormal conditions (e.g., blank screen), press On/Off button for 10 seconds to restart the watch phone.

5. Download the App & Bind the Watch

Step 1: Download & Install the App


Scan the QR code on the right to download and install the App or go to Google Play or Apple App Store and search for "imoo" or "Watch Phone" to download and install the App.



Step 2: Bind the Watch

1. Open the App, register or log in.
2. Turn on the watch and complete the binding process according to the instructions displayed on the watch, or slide the watch interface to find the Bind Code, scan the QR code, or manually enter the Bind Code for binding.


Get the Bind Code:

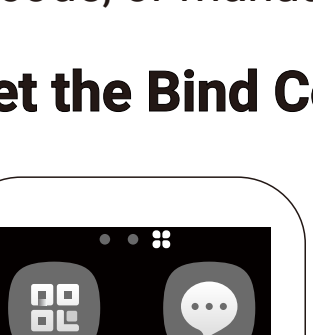


1. Tap Bind Code on More interface to get the bind code.
2. Scan the QR code or enter the Bind Code manually.

6. Watch Language Settings

1. Go to "More"->"Watch Settings" on imoo App to switch the language, as shown below:

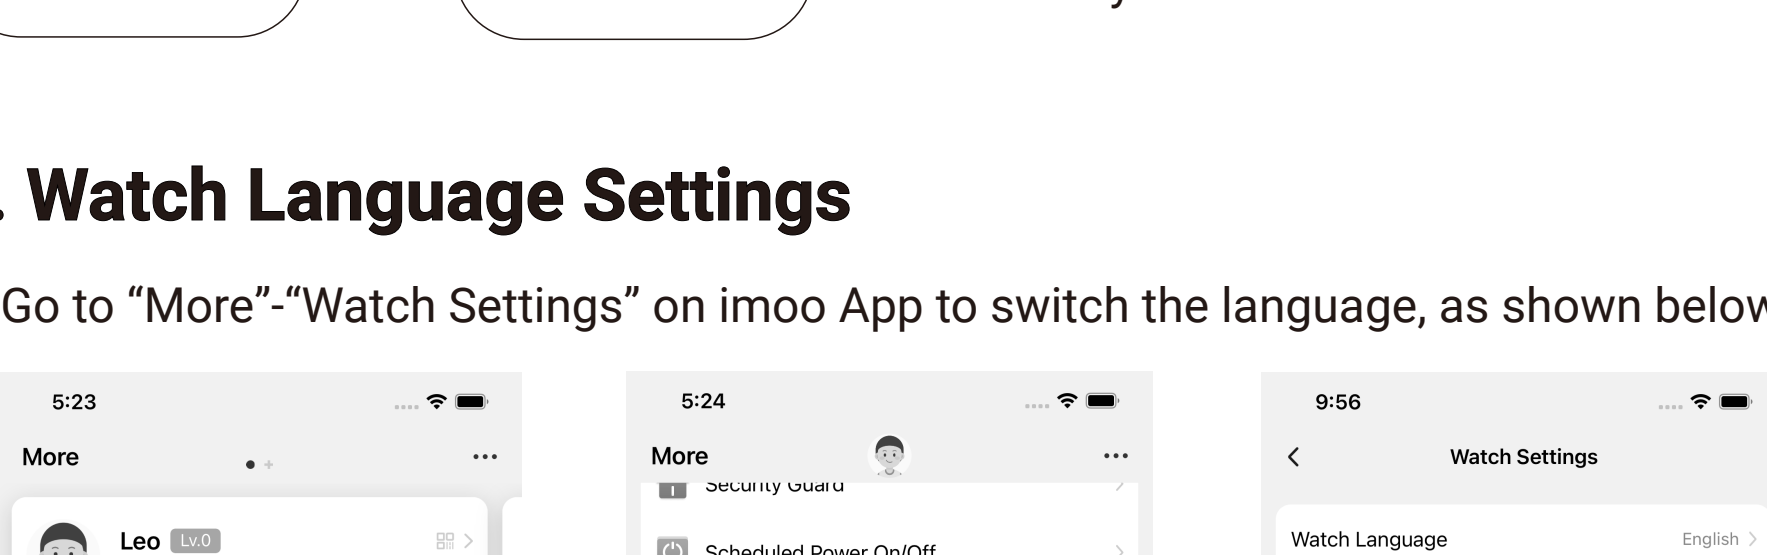


2. After setting, language switching will be conducted and the watch will be restarted automatically, as shown below:


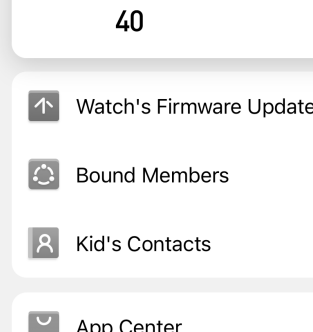


7. Charge


1. As shown below, please flip up the watch through the lock button to find the charging contactors of the watch.

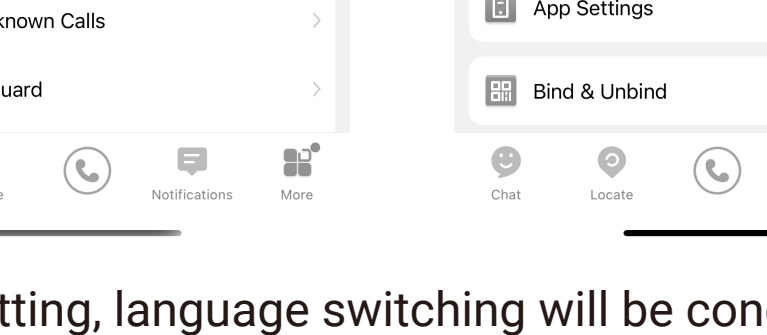

2. Then align the charging contactors on the watch with the charging contactors on the charging cable until "Charging" is shown on the screen. Please use the CE certified power adapter.

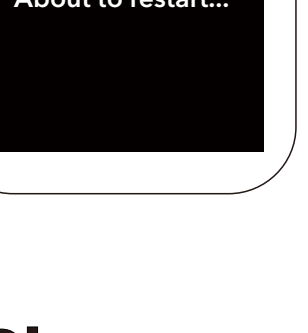

8. OTA Upgrade

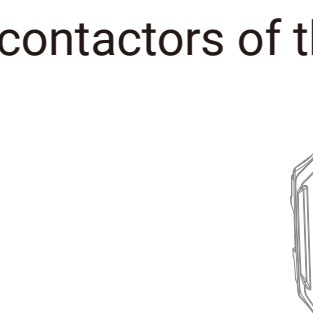

When binding a watch, the App will detect the watch's version to check if it needs to be upgraded. If needed, the watch will be upgraded automatically when charging.

*Remark: There may be risks for informal root or system upgrade.

9. Basic Operation

Turn on the screen: Tap the screen or press On/Off button to turn it on.


Turn off the screen: 1. Press On/Off button to turn off the screen when the home screen is on;
 2. Cover the screen with your hand to turn it off;
 3. You can set the "Screen Timeout" in "Display & Brightness" of the "Watch Settings" on More interface. When the time is up, the screen will be turned off.




Wallpaper: Long press the home screen to enter Wallpaper. Slide left or right to view more and select one as your wallpaper.



Slide left from the home screen to enter More interface, slide up or down to choose corresponding features.

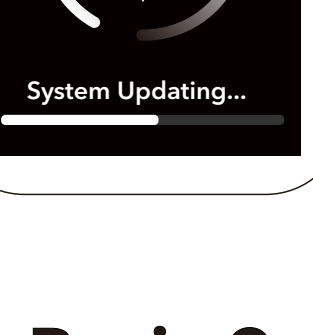


Slide right from the home screen to enter "Call".

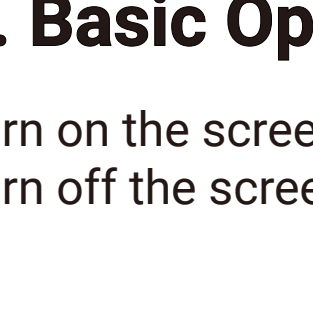

Slide from top to bottom to check the status bar and some important push notifications.



Slide right from Chat interface.

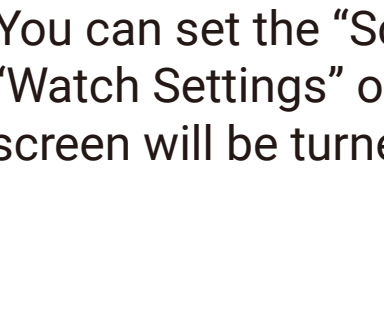


Go back to More interface.

After entering each feature, you can slide right to exit the feature, as shown on the left. You can also press the On/Off button to go back to the home screen.

10. Basic Features



Call
 Select a contact to make a voice call or video call. Video calls may consume a lot of network data. We suggest you make video calls when connected to Wi-Fi. If the App cannot receive the video call, please check whether Notifications has been enabled or whether the call was intercepted by the system.

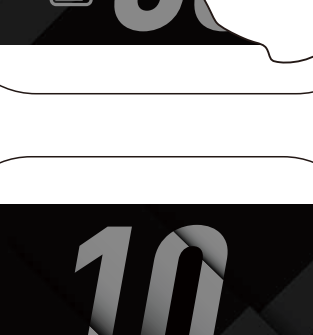

Chat
 Send voice messages: Tap "Hold to Talk" to record, and release your finger to send your voice message. Play voice messages: Unread voice messages will be shown on the screen. Tap to play voice messages. Add friends: Tap "Face-to-face Making Friends" on Add Friends interface. Then you can add a friend by bumping your watches together after you find a friend.



Take Photos
 Tap the watch screen to take a photo. If you want to switch to using the rear camera, please flip up your watch. Besides, you can switch cameras by sliding up or down on the interface.



Video
 Tap "Start" to record a video. Tap the corresponding icon to switch cameras or view the saved videos or photos.

Bluetooth

Bluetooth headsets can be connected to the watch. You can use Bluetooth headsets to make a call. On More interface, tap "Watch Settings" and choose "Bluetooth" to enable or disable Bluetooth.

Wi-Fi

After binding your watch, enter "More-Watch's Wi-Fi" on App to add a network.

11. Appendix: Specifications

	Specifications
Dimension	57.8×44.7×15.9 (mm)
Color	Flash Green/Fantasy Purple
Display	1.41inches AMOLED (320×360)
Network	GSM900: TX/RX: 880-915MHz/925-960MHz GSM1800: TX/RX: 1710-1785MHz/1805-1880MHz CDMA BC0: TX/RX: 824-849MHz/869-894MHz CDMA 2000 BC0: TX/RX: 824-849MHz/869-894MHz WCDMA B1: TX/RX: 1920-1980MHz/2110-2170MHz WCDMA B2: TX/RX: 1850-1910MHz/1930-1990MHz WCDMA B5: TX/RX: 824-849MHz/869-894MHz WCDMA B8: TX/RX: 880-915MHz/925-960MHz FDD-LTE B1: TX/RX: 1920-1980MHz/2110-2170MHz FDD-LTE B2: TX/RX: 1850-1910MHz/1930-1990MHz FDD-LTE B3: TX/RX: 1710-1785MHz/1805-1880MHz FDD-LTE B5: TX/RX: 824-849MHz/869-894MHz FDD-LTE B8: TX/RX: 880-915MHz/925-960MHz TDD-LTE B38: TX/RX: 2570-2620MHz TDD-LTE B39: TX/RX: 1880-1920MHz TDD-LTE B40: TX/RX: 2300-2400MHz TDD-LTE B41: TX/RX: 2555-2655MHz
VoLTE	Supported
CPU	Qualcomm Snapdragon Wear 2100
Sensors	Accelerometer, Gyroscope, Hall Sensor
Memory	RAM: 512MB ROM: 8GB
Connectivity	WiFi: TX/RX: 2412-2472MHz, Bluetooth 4.2
Rated Output Power	GSM900: (33dBm±2dB) GSM1800: (30dBm±2dB) CDMA BC0: 24dBm(+6dB/-1dB) CDMA 2000 BC0: 24dBm(+6dB/-1dB) WCDMA B1/B2/B5/B8: 24dBm(+1.7/-3.7dB) FDD-LTE B1/B2/B3/B5/B8: 23dBm(±2.7dB) TDD-LTE B38/B39/B40/B41: 23dBm(±2.7dB) WiFi < 20dBm
Locating Technology	GPS, GLONASS, BDS, WiFi, LBS
Cloud Service	Supported
Operation System	Android 7.1.1
Battery	680mAh
In the Box	Watch Phone Z6, Charging Cable, Manual, SIM Card Picker

12. Statements

- Please read this manual carefully so that you can use this product correctly and safely.
- Please use the watch strap that is well matched with this product to avoid affecting the watch's antenna signal. The use of other straps may result in poor call quality and locating failure.
- This product is equipped with GPS locating, which is disabled until the watch is bound. Users can use GPS to locate the watch's location.
- The outdoor locating of this product may fail because of failure in searching satellite signal in inclement weather.
- Please use the accessories that come with the package only. If the user does not use this product in a correct way and connects it with incompatible accessories, it will cause the automatic invalidation of the warranty and may cause irreparable damage to the product, or even endanger the safety of your children and you. For the cases mentioned above, we bear no liabilities.
- If you need to replace accessories, please buy them from our official service center only.
- The color of the watch and its strap may fade over time, which will not affect the use of the product and is harmless to human body.
- If you disassemble the case of this product without authorization, the product will no longer enjoy the warranty service.
- This product works normally with smooth network connection only. We bear no liabilities for any loss caused by interruptions in service due to network failure or any other force majeure.
- We reserve the rights to modify and improve any product details described in the document without prior notice for the purpose of constant improvement and sustainable development. The contents stated in this manual are provided based on the conditions when the products are manufactured. Unless otherwise indicated, we do not guarantee the accuracy, reliability and the contents of the documents, either expressed or implied.
- To the maximum extent permitted by applicable laws, in no event, whatever the cause, shall our suppliers and we be liable for any special, incidental, consequential or indirect loss or damage.
- Some features of this product (including but not limited to Maps) are provided by third parties.
- This manual contains important information, which should be kept properly.
- This product is not equipped with the monitoring feature.

13. Attentions

Please read the following contents and attentions carefully before using this product, and abide by them when using it. We bear no liabilities for the consequences caused by the failure in using this product correctly or abiding by the relevant instructions of this product.

Attentions for Operation Place and Environment:

- Any radio transmission device (including this product) may interfere with the medical device that is not properly protected and please observe the relevant regulations of the places where wireless transmission of electronic equipment is prohibited.
- Pacemaker and implanted cardioverter defibrillator: Keep the distance between the watch and the instrument greater than 6 inches (about 16cm) each time you turn on your watch. Do not put your watch in your clothes pocket. Please use the watch on the other side of the instrument to reduce potential interference. If you suspect that interference has occurred, turn off your watch immediately.
- Hearing aids and implanted cochlea: Some wireless digital devices may interfere with some hearing aids or implanted cochlea. If this type of interference occurs, please contact the manufacturer to find a solution.
- For other medical equipment, check with the manufacturer to confirm whether the surrounding RF signals can be adequately shielded. You can also consult your doctor for the relevant information.
- It is strictly prohibited to use this product in petrol stations, fuel warehouse, chemical plants or facilities transporting or storing chemicals to avoid explosions or fire disasters.
- Please power off this product before taking off.
- Please abide by all the relevant regulations and never use this product in a place where blasting is carried out.
- All wireless devices can be subject to interference, which can have an impact on performance.
- Never put the product, battery and its charger (charging cable) in or around the heating equipment or high voltage equipment (e.g., microwave oven, oven, radiator, electric heater, etc.), otherwise, it may cause damage to circuit, fire, explosion and other accidents.
- Never allow children or pets to swallow this product or its accessories to avoid injury.
- It is strictly prohibited to use this product in dusty, damp, dirty places or places close to magnetic field.
- It is strictly prohibited to use this product in thunderstorm weather.
- Never impact or vibrate this product and its accessories forcefully to avoid damage.
- Do not use the watch speaker against your ear, as it may cause hearing damage due to excessive volume.
- When using a power-hungry application or using applications on the device for a long time, it is normal that the device is warm to the touch, and it will not affect the performance or service life of the device.
- If the watch is getting hot, stop using it until it cools down. Low-temperature burns such as red spots and pigmentation may be caused if the skin contacts the device with extremely high temperature in the long run.
- If parts (e.g., watch straps, strap fixing rings, clasps, etc.) need to be replaced, please operate by an adult, and never allow children to touch the parts so as to prevent children from accidentally swallowing small parts, which may lead to suffocation or other dangerous situations.
- Please use the parts of the product correctly according to the manual, and do not use them for other purposes.

Maintenance:

- Non-professionals are not allowed to disassemble the watch and other accessories without authorization. For any faults with the watch and its accessories, please contact our local after-sales service center.
- Never clean this product with chemical solvent or cleaning agent.
- Prevent the watch from falling and avoid knocking, vibrating or roughly treating the watch, which may lead to damage to the screen, internal circuit board and precise structure.
- For any abnormalities during use, long press the On/Off button until the watch is restarted. General abnormalities can be solved in this way.
- To prolong the service life of the battery, please keep the battery level above 80%. The charged battery left unused for a long time will gradually discharge itself. When it is not in use, please place it in a cool, dry and dark place after charging.
- The cleanliness of the watch strap is not a constant feature, it is related to the environment in which the user used and user's habits. The watch strap is in direct contact with the skin, so it must be clean. If the strap is stained with perspiration, dust or other stains, wipe it with a clean, dry and soft cloth.
- If the charging contactors on the watch are dirty, clean them with a dry and soft cloth, and do not scratch them with hard metal objects.
- If the watch strap is old or worn out and needs to be replaced, please entrust your dealer or our after-sales service center to replace it. Please note that even if the watch is under warranty, you still need to bear the replacement cost of the strap.
- Power off the watch before cleaning it.
- Do not clean the watch while charging.
- Do not use hair dryers or other heating methods to keep the watch dry.
- Do not use pressurized air guns, washing machines or other mechanical tools to clean the watch.

Attentions for Charging and Battery Use:

- The volume of the watch decreases gradually as the voltage decreases.
- Due to the consideration of environmental protection, this product is not equipped with a power adapter. You can use the USB interface of your computer or the power adapter with CE certification to charge. And the output voltage and current of the power adapter should conform to the following specifications: output DC voltage: 5V; output DC current: No less than 1200mA.
- Please buy the power adapter through official channels. Poor-quality or counterfeit power adapters may cause an explosion or fire.
- The power adapter is a disconnecting device, the power outlet should be installed nearby for convenient disconnecting. When repairing or disassembling the watch, please unplug the power adapter from the outlet.
- Please ensure that charging contactors are dry and without dirt before charging.
- Never throw the battery into fire or expose it to an overheated environment such as sun, roasting with fire or similar conditions to avoid leakage, overheating, explosion or fire disaster.
- Please replace the battery with a new one with the same or equivalent type to avoid explosions.
- This product is equipped with a built-in battery. It is strictly prohibited to dismantle, squeeze, heat or burn the battery. It's also strictly prohibited to touch or pry the battery with sharp objects and screwdrivers since all the operations mentioned above may cause fire or combustion of the battery.
- If the battery is overheated, discolored, out of shape, bulged or weeping during use, charging, or storage, stop using and replace it with a new one to avoid security issues.
- When charging, since the temperature of the battery will rise, please do not put the battery together with combustible materials (such as bedding, clothes and books) to avoid fire.
- Do not use or store this product in the environments of high temperature, high pressure, humidity, or strong magnetic field.
- Please charge the watch at 5°C-35°C to avoid degradation in battery performance and reduction in standby time.
- To prevent children from getting an electric shock, please charge the watch under the guidance of parents or other guardians.

 Caution: There may be a risk of explosion if the battery is not replaced in the right way.

Attentions for SIM Card and Charging Cable Use:

- When installing/removing the SIM card or connecting the charging cable to the charging contactors, make sure that the SIM card is correctly installed or the charging cable is correctly connected, do not insert the SIM card or connect the charging contactors to the charging cable forcibly.
- Do not remove the SIM card when the watch is transferring or accessing data, otherwise, it will cause data loss or damage to the SIM card.
- The watch will actively connect to the data network to synchronize with the server in a discontinuous manner under working conditions (Data connection will not be actively requested under test).
- Please activate the caller ID feature of the SIM card. The watch will consume a certain amount of data during normal use and upgrade. Please make sure that the SIM card has sufficient call charges and data before use. As for the call charges and data charges incurred when using the SIM card, please refer to the operators' charging standards.

Wearing Instructions:

- When wearing a watch, please adjust the tightness of the watch strap. It should not be too tight so as to provide a breathing space for the skin. Also, it should not be too loose so as to prevent the watch from falling or damage due to falling.
- Try to avoid flushing the watch or wearing a watch in the shower; Otherwise, the watch may be damaged.
- If the volume of the watch decreases after being soaked with water, remove the water from the speaker hole and the volume will return to normal.

People Prone to Skin Allergies:

- People with sensitive physical constitution may feel uncomfortable when wearing wearable devices, should take extra caution when using this product.
- If you feel uncomfortable, it may be caused by wearing too tight or wearing for a long period of time. It is recommended that you adjust the strap tightness or wear the watch with the other hand and observe.
- Stop using the watch immediately and consult a physician if you experience redness, swelling, itching, or other discomforts on the skin around or under the watch.
- Continuing to use after recovering may cause a recurrence or increased discomfort.
- If you need to replace the watch strap, please purchase it from our official sales branches, as straps purchased from informal channels may cause skin allergies.
- We are not responsible for any personal discomfort caused by special physical conditions.

Statement of Water Resistance:

- The water resistance level of the watch reaches 20 meters of the ISO 22810: 2010 IDT. It can be used for shallow-water activities (e.g., swimming in a pool), but it cannot be used for diving, water skiing, or other activities involving high velocity flow or exceeding the specific depth.

Water resistance is not permanent and may be weakened over time. To ensure the normal use of the watch, please abide by the following rules:

- (1) Do not wear a watch in shower, sauna, Khan Steam or when bathing in a hot spring.
- (2) Prevent the watch from suffering sudden temperature changes, such as drying the watch using a hair dryer.
- (3) Avoid using the watch or installing or taking out the SIM card when the watch is wet.
- (4) Avoid contact with high velocity flow such as rafting, surfing and water skiing.
- (5) Avoid being washed with your clothes in the washing machine due to carelessly leaving it in the pocket.
- (6) Prevent the watch from falling or being hit as its water resistance may be affected.
- (7) Avoid contact with solvents (liquor, medicinal alcohol, etc.), acid substances, detergents, soapy water, perfumes, spray insecticide, lotions, suntan oil, oil, hair dyes, etc.
- (8) Wipe the sweat on the watch as soon as possible.
- (9) Avoid immersing the watch in water for a long time. If the watch gets wet by accident, wipe dry thoroughly with a clean and soft cloth.
- (10) After the watch comes into contact with the water (such as after swimming), the water needs to be removed from the holes of the speaker and microphone, or the watch should be dried naturally (to avoid impact on volume) before use.

Attentions for Using Video Call and Camera:

- It is recommended that video calls when connected to a WLAN network and in a relatively stable signal environment.
- Video calls will consume a lot of power. And the CPU will generate a lot of heat. When the watch's temperature reaches the limit, the protection function will be automatically activated to cut off the video call.
- The watch is equipped with dual cameras: the front camera: 5MP, the rear camera: 8MP, which will be adjusted properly according to the actual features during use.

Attentions for Using the Base:

- The base of the watch is a precise part, which has passed rigorous tests. Please use it carefully.

Personal Information Safety:

- Please use this product with the consent of the wearer. In order to guarantee the safety of your children, please ensure that the watch is not bound by unauthorized persons. We promise to take strict security measures in accordance with the law to protect the security of personal data of your children and you.

Pre-set Applications Enquiries:

- For more details about the watch preset applications, please bind the watch and check via the App-App Settings>About-Watch Default Apps Notice.

CE&UK Certification Information (SAR):

- The watch has been tested for typical wrist-worn operation and meets the applicable limits for radio frequency (RF) exposure. To maintain compliance with RF exposure requirements, keep the watch at least 10 mm apart when placing the watch near the face to ensure that the exposure level remains at or below the test level. There is no need to leave a distance between the watch and the wrist.

Personal Data Processing Tips:

- Please understand that personal data required for the features and/or services of the Watch Phone will be collected and processed during the use of the Watch Phone.


EU&UK Declaration of Conformity (DoC):


- Hereby, Guangdong Genius Technology Co., Ltd., declares that this type of equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and UK Radio Equipment Regulations (SI 2017/1206).

The declaration of conformity may be consulted at:
<https://www.imoo.com/en/pc/certification/index.html>

Waste Electrical and Electronic Equipment (WEEE):

- This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, user has the choice to give his product to a competent recycling organization. Proper recycling of your product will protect human health and the environment.


 Our company will seek shared responsibility and cooperation from customers in reducing the environmental impact of their products.

 Our company will comply with all the applicable laws related to WEEE management.

Attentions for Hearing:

- To prevent possible hearing damage, please do not use high sound pressure level and high volume to listen to the sound for a long time.

- When using headphones, it is recommended to use the minimum volume required for music or video, so as not to damage your hearing.

-  Prolonged exposure to high volume may cause permanent hearing damage.

Caution:

- Risk of explosion if the battery is replaced by an incorrect type;
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Compliance Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC SAR Statement:

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body.

14. Warranty Descriptions

Service Terms:

Thank you for choosing our product. We will provide comprehensive service assurance in accordance with local rules and regulations. In case of any inconsistency or omission with local policies, the local policies shall prevail.

- Within 14 days from the date of sale, users can choose product replacement or return for performance fault (not caused by human factors) of the main machine.
- Within 24 months from the date of sale, users can enjoy warranty service for performance fault under normal use.

- The information filled in the warranty card should be complete, accurate and convincing. Customer should ask for a valid purchase invoice and keep it properly.

- The premise of requesting warranty service is to have a valid warranty card and purchase invoice (The information filled in the valid warranty card and purchase invoice should be complete, accurate and without alterations). If the valid warranty card and purchase invoice are lost and a copy of the valid invoice cannot be provided, a 24-month warranty service will be provided since the 90th day after the date of production of the Watch Phone.

- We provide a 6-month (from the date of sale) replacement service for the charging cable. Other accessories (such as watch strap, manual, etc.) do not enjoy the warranty service.

Warranty Descriptions and Attentions:

- The warranty service is only valid under normal use of the watch. For the cases as below, we do not provide warranty service but provide repair requiring an extra charge.

- (1) Exceeded the warranty period;
- (2) Damage caused by human factors, including damage caused by the user's failure in using, operating or keeping the product as required by the manual;
- (3) Damage caused by unauthorized dismantling, maintenance, repair and modifications;
- (4) Damage caused by natural disasters (e.g. flood, fire, earthquake, lightning, etc.);
- (5) No valid warranty card or purchase invoice (except those that can prove the product is under warranty);
- (6) Unauthorized alterations of the warranty card; or the product model or code on the warranty certificate is inconsistent with the real product;
- (7) Natural wear and tear during use (e.g. case, watch strap, watch buckle, display screen, etc.);
- (8) Damages on the motherboard or card deck caused by using self-cutting SIM card;
- (9) Errors, damages and defects that do not caused by the quality of the product (e.g. improper use, moisture, deformation, etc.);
- (10) Fault caused by network or wireless information service provider (operator) is not covered by the warranty.

- Any oral agreement made by the dealer regarding the warranty contents, which is beyond the scope of this warranty agreement, shall not be included in the scope of warranty.

- For products in need of repair, you can go to the nearest imoo official service center for replacement. During replacement, if the main machine is damaged, you can replace it with a new one of the same model; if the accessory is damaged, you can replace it. Both the replacements of the main machine and accessories are for free.

- All parts, components and accessories replaced within the warranty are owned by the company.

imoo

Watch Phone

Email: support@imoo.com



The image shown is for illustration purpose only.

Important: Information stated is important for successful application and understanding the product. We recommend you to keep this guide for future reference.